



Steering Column Instructions

How To Correctly Measure ARC Steering Columns

Please follow these procedures to identify what length column you will need.

5 POSITION TILT COLLAPSIBLE COLUMN - FLOOR OR COLUMN SHIFT



5 POSITION TILT NON-COLLAPSIBLE COLUMN - FLOOR OR COLUMN SHIFT



RETRO 40'S COLLAPSIBLE COLUMN

1.50 Inch
Diameter

1.75 Inch
Diameter

1.75 Inch
With Collar

4 Inches

Column Length

